
SILENCIONS

ASSEMBLY INSTRUCTIONS


Acoustic enclosure for heat pumps s|HP|

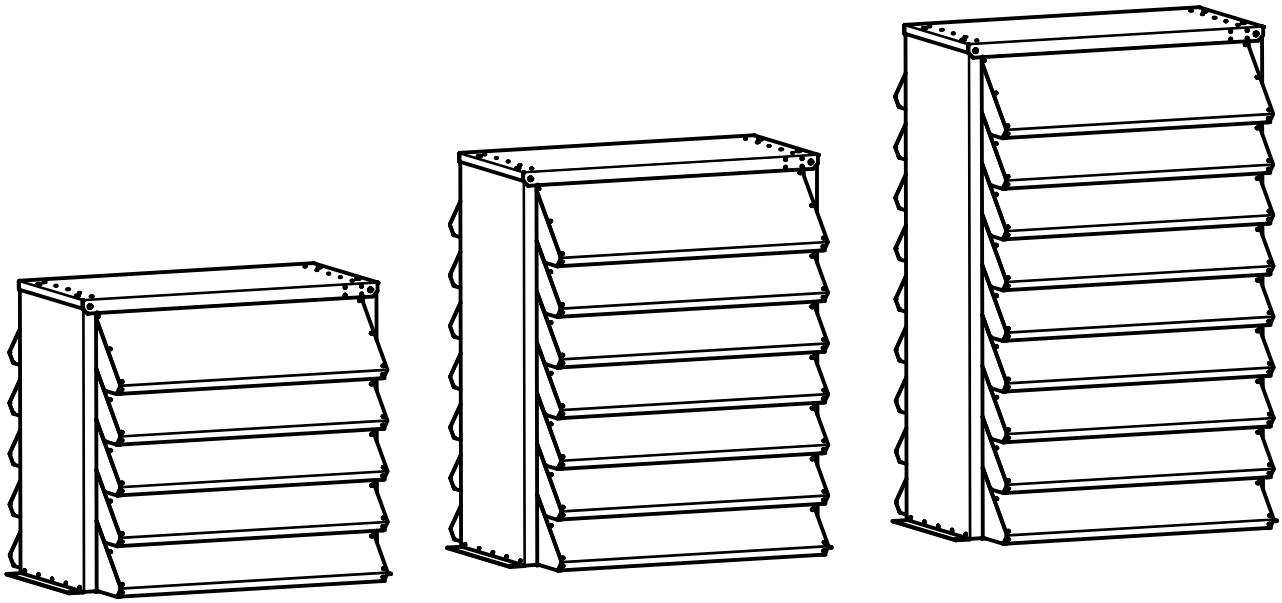

Manufacturer:

Silencions Sp. z o.o.
ul. Bierutowska 57-59, budynek 5
51-317 Wrocław

I. PARTS LIST

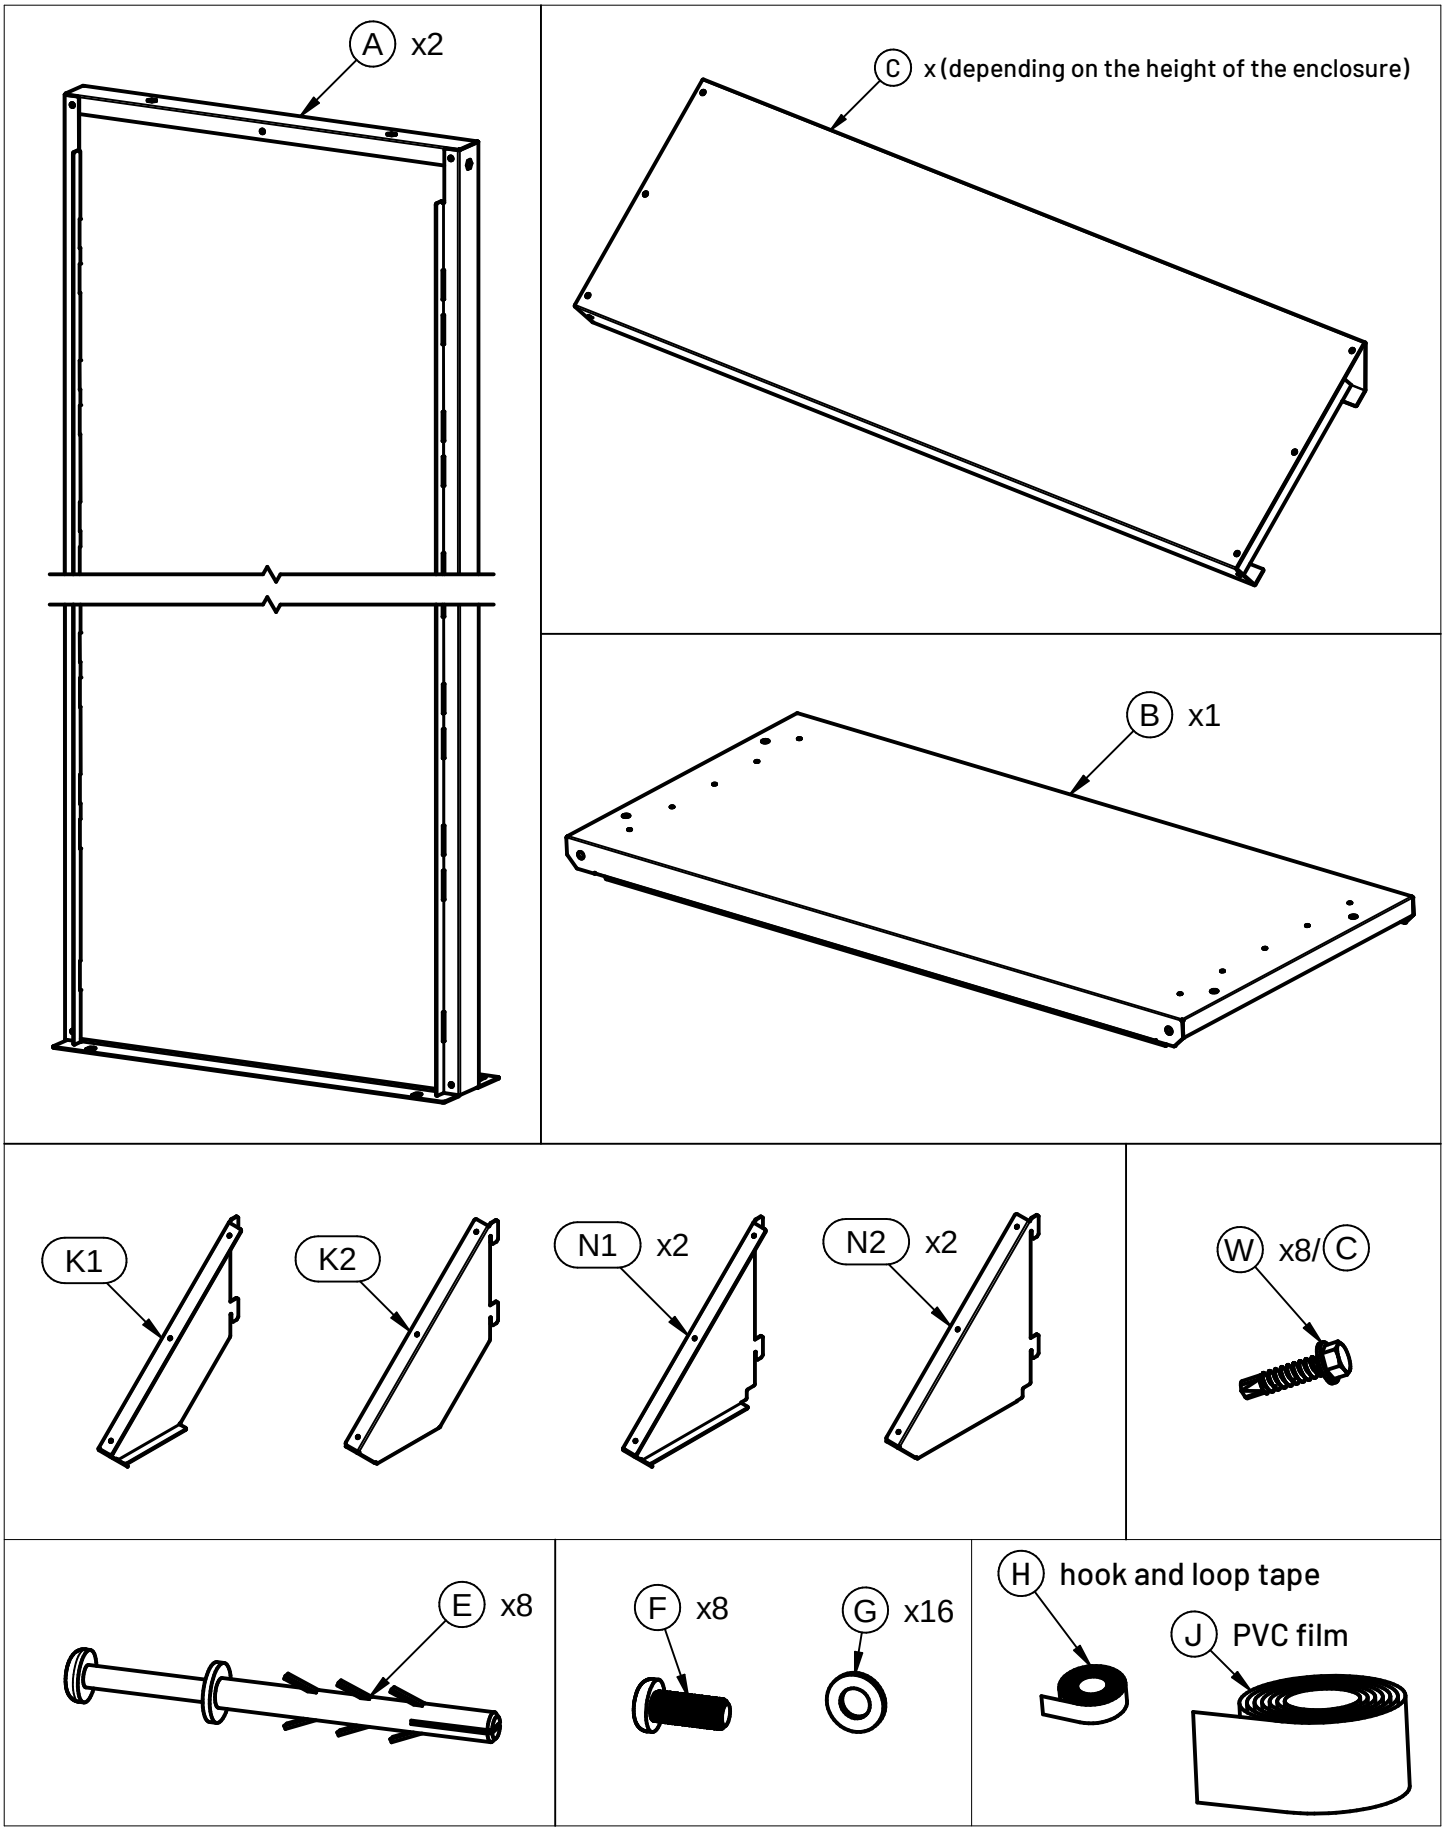
A x2
C x (depending on the height of the enclosure)
B x1
K1
K2
N1 x2
N2 x2
W x8/C
E x8
F x8
G x16
H hook and loop tape
J PVC film

It is recommended that two fitters be present, to ensure that the assembly process runs smoothly and safely.

Assembly

The acoustic enclosure must be installed in accordance with the steps described below, which are also illustrated in section II of these instructions:

1. Screw the side closures/triangles (K1, K2, N1 and N2) to blind C using screws W. The flanges with the holes of the side closures should be concealed inside the blind sheet.

2. The P and R blinds are fitted with hooks, whilst the A side panels have corresponding sockets. Their positioning, appearance and the method for fitting the P blind are shown in the drawings.

3. Position side panels A at the installation site. Align the panels with each other by fitting two blinds R at the front and rear of the enclosure, approximately halfway up. Then secure side panels A to the top panel B using screws F and washers G.

4. Position the pre-assembled panels symmetrically in relation to the heat pump, i.e. align them so that the distances 'x' and 'y' at the indicated points are equal. If necessary, make any required adjustments to the alignment.

5. Once the walls have been correctly positioned, mark out the centres of the holes for anchoring the side panels on the substrate, for example using a centre punch.

6. Remove the side panels of the enclosure and drill 8 holes in the base as shown in the drawing.

7. Cut the self-adhesive hook and loop tape H to the required length and stick it to the front surface of the heat pump as shown in the drawing.


8. Position the side panels A and, using the pre-drilled holes and wall plugs E, secure them to the floor. Before tightening the screws completely, mount the top panel B and the blind R to check the fit. Adjust the position of the side panels A if necessary and then tighten the screws. Next, to separate the air intake from the discharge, cut the PVC film J to the required length and width and stick it to the hook and loop tape H.


9. Mount the assembled P and R blinds as described in step 2. Start by hanging the P blinds, then mount the remaining R blinds from the bottom up.


10. Mount and bolt the top panel B in place using bolts F and washers G.

To dismantle the enclosure, follow the same procedure, carrying out the above steps in reverse order.


II. ILLUSTRATED ASSEMBLY INSTRUCTIONS

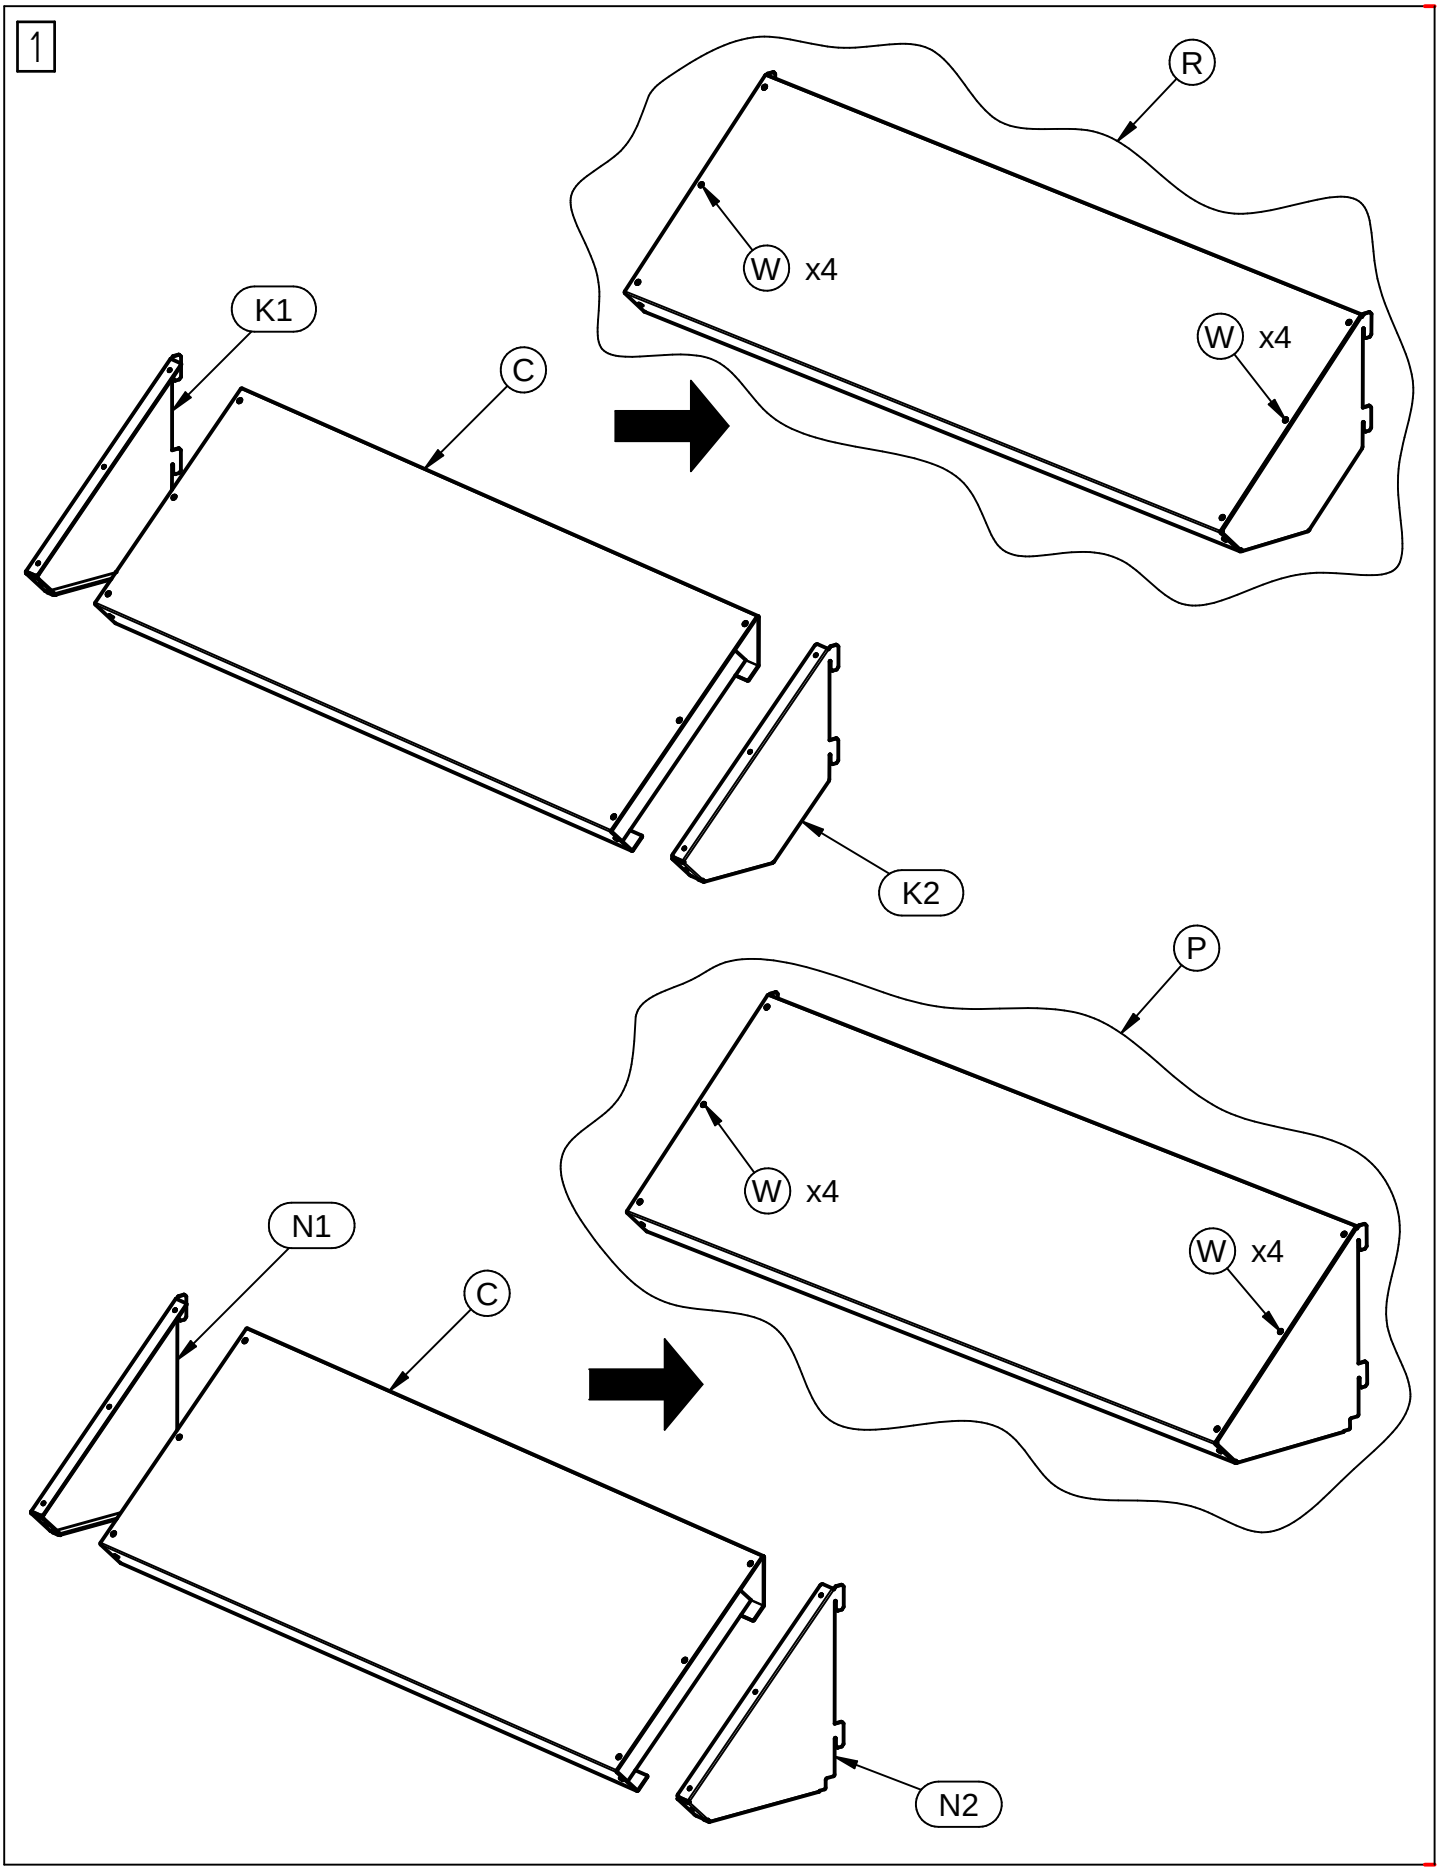

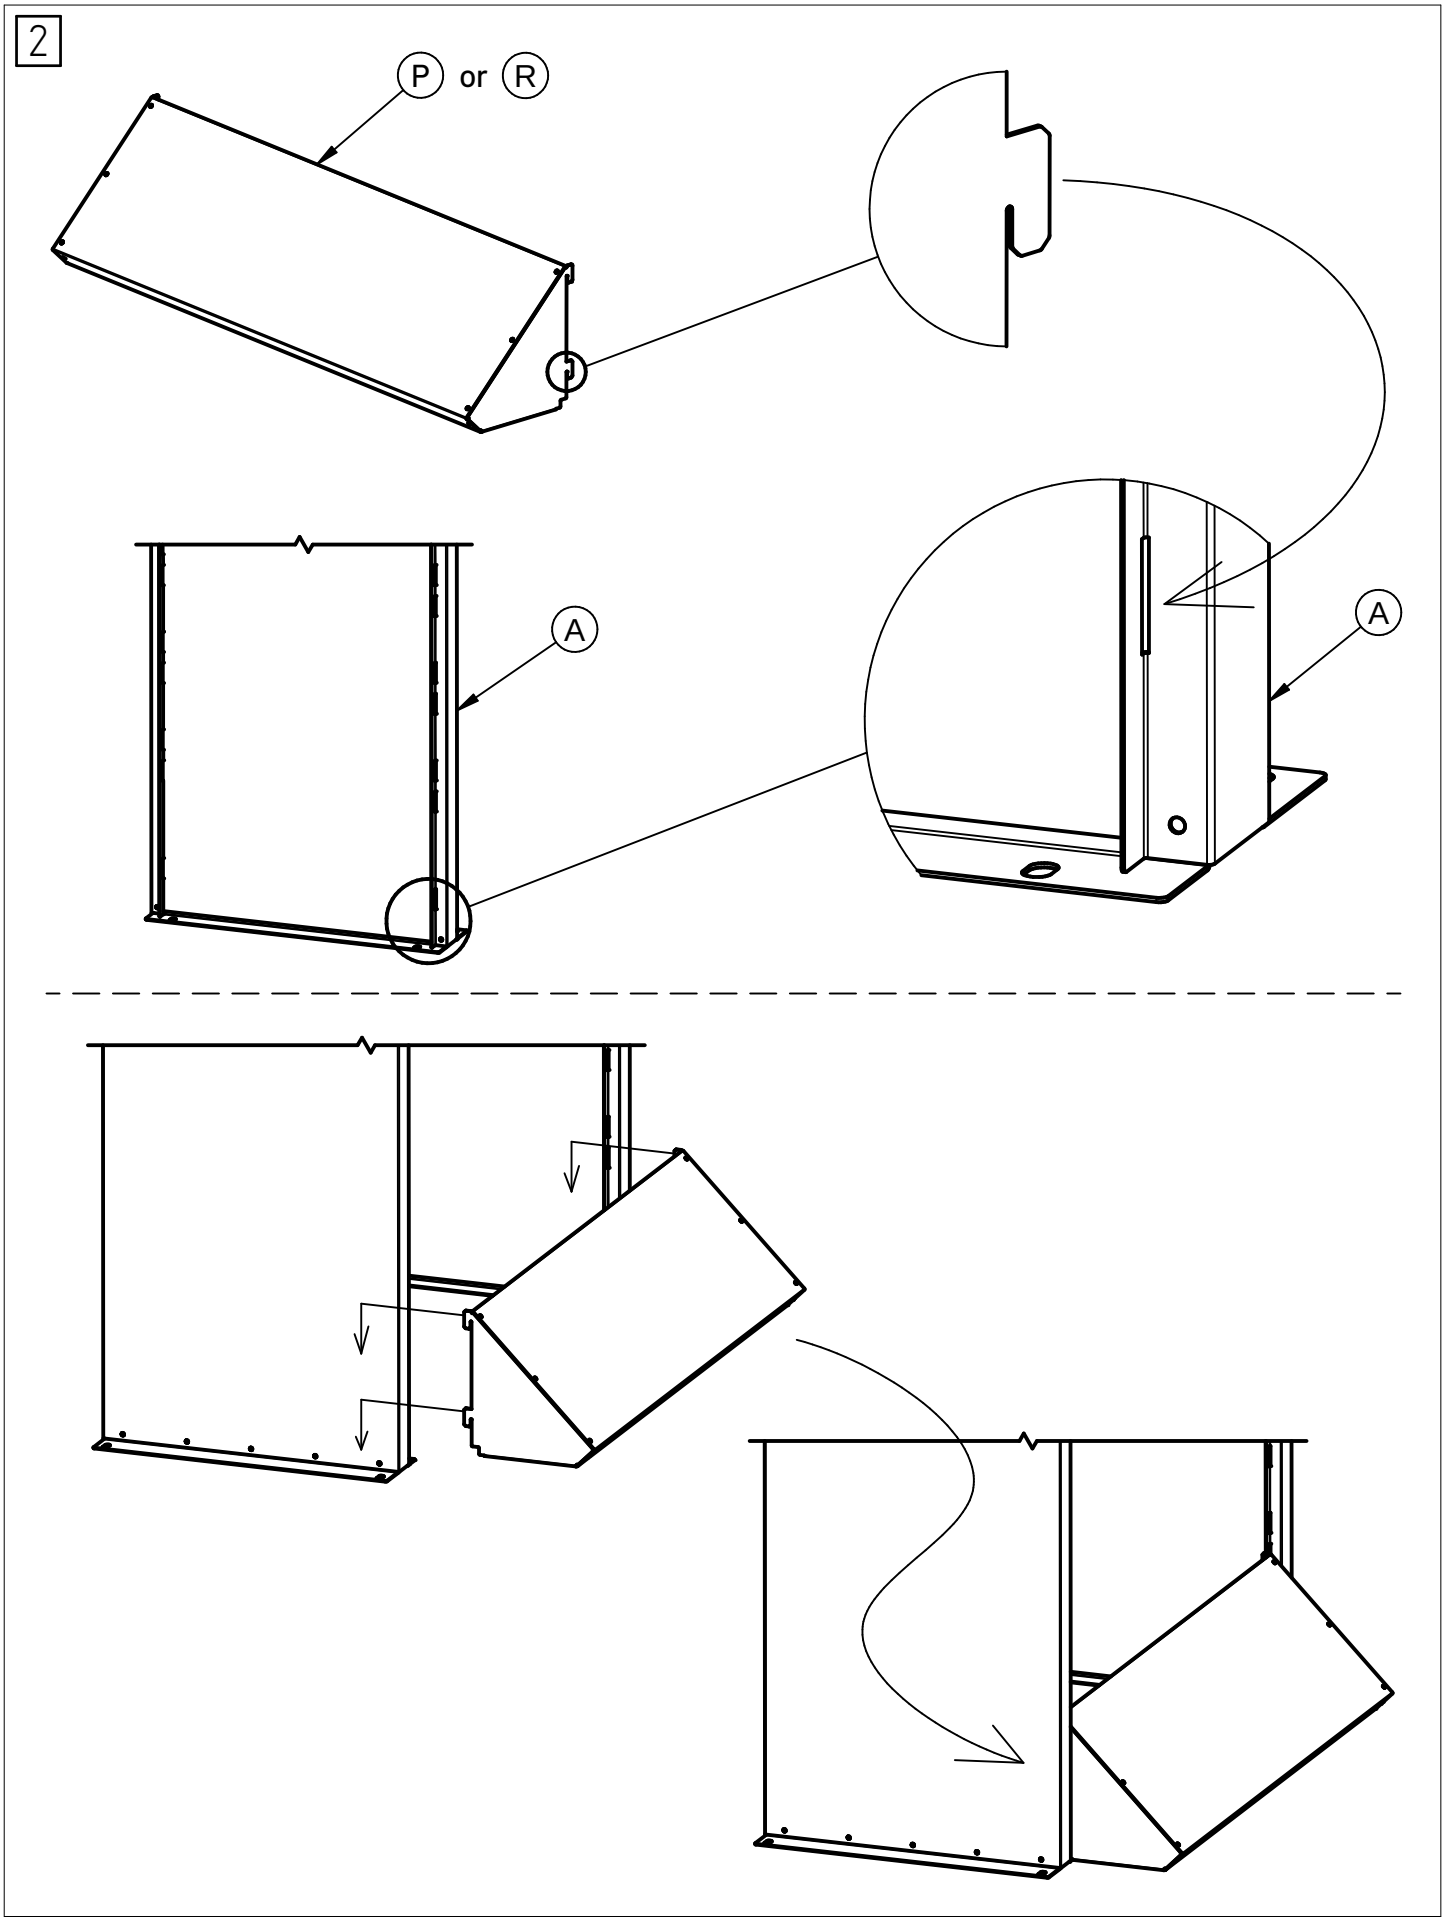

2
P or R
A
A

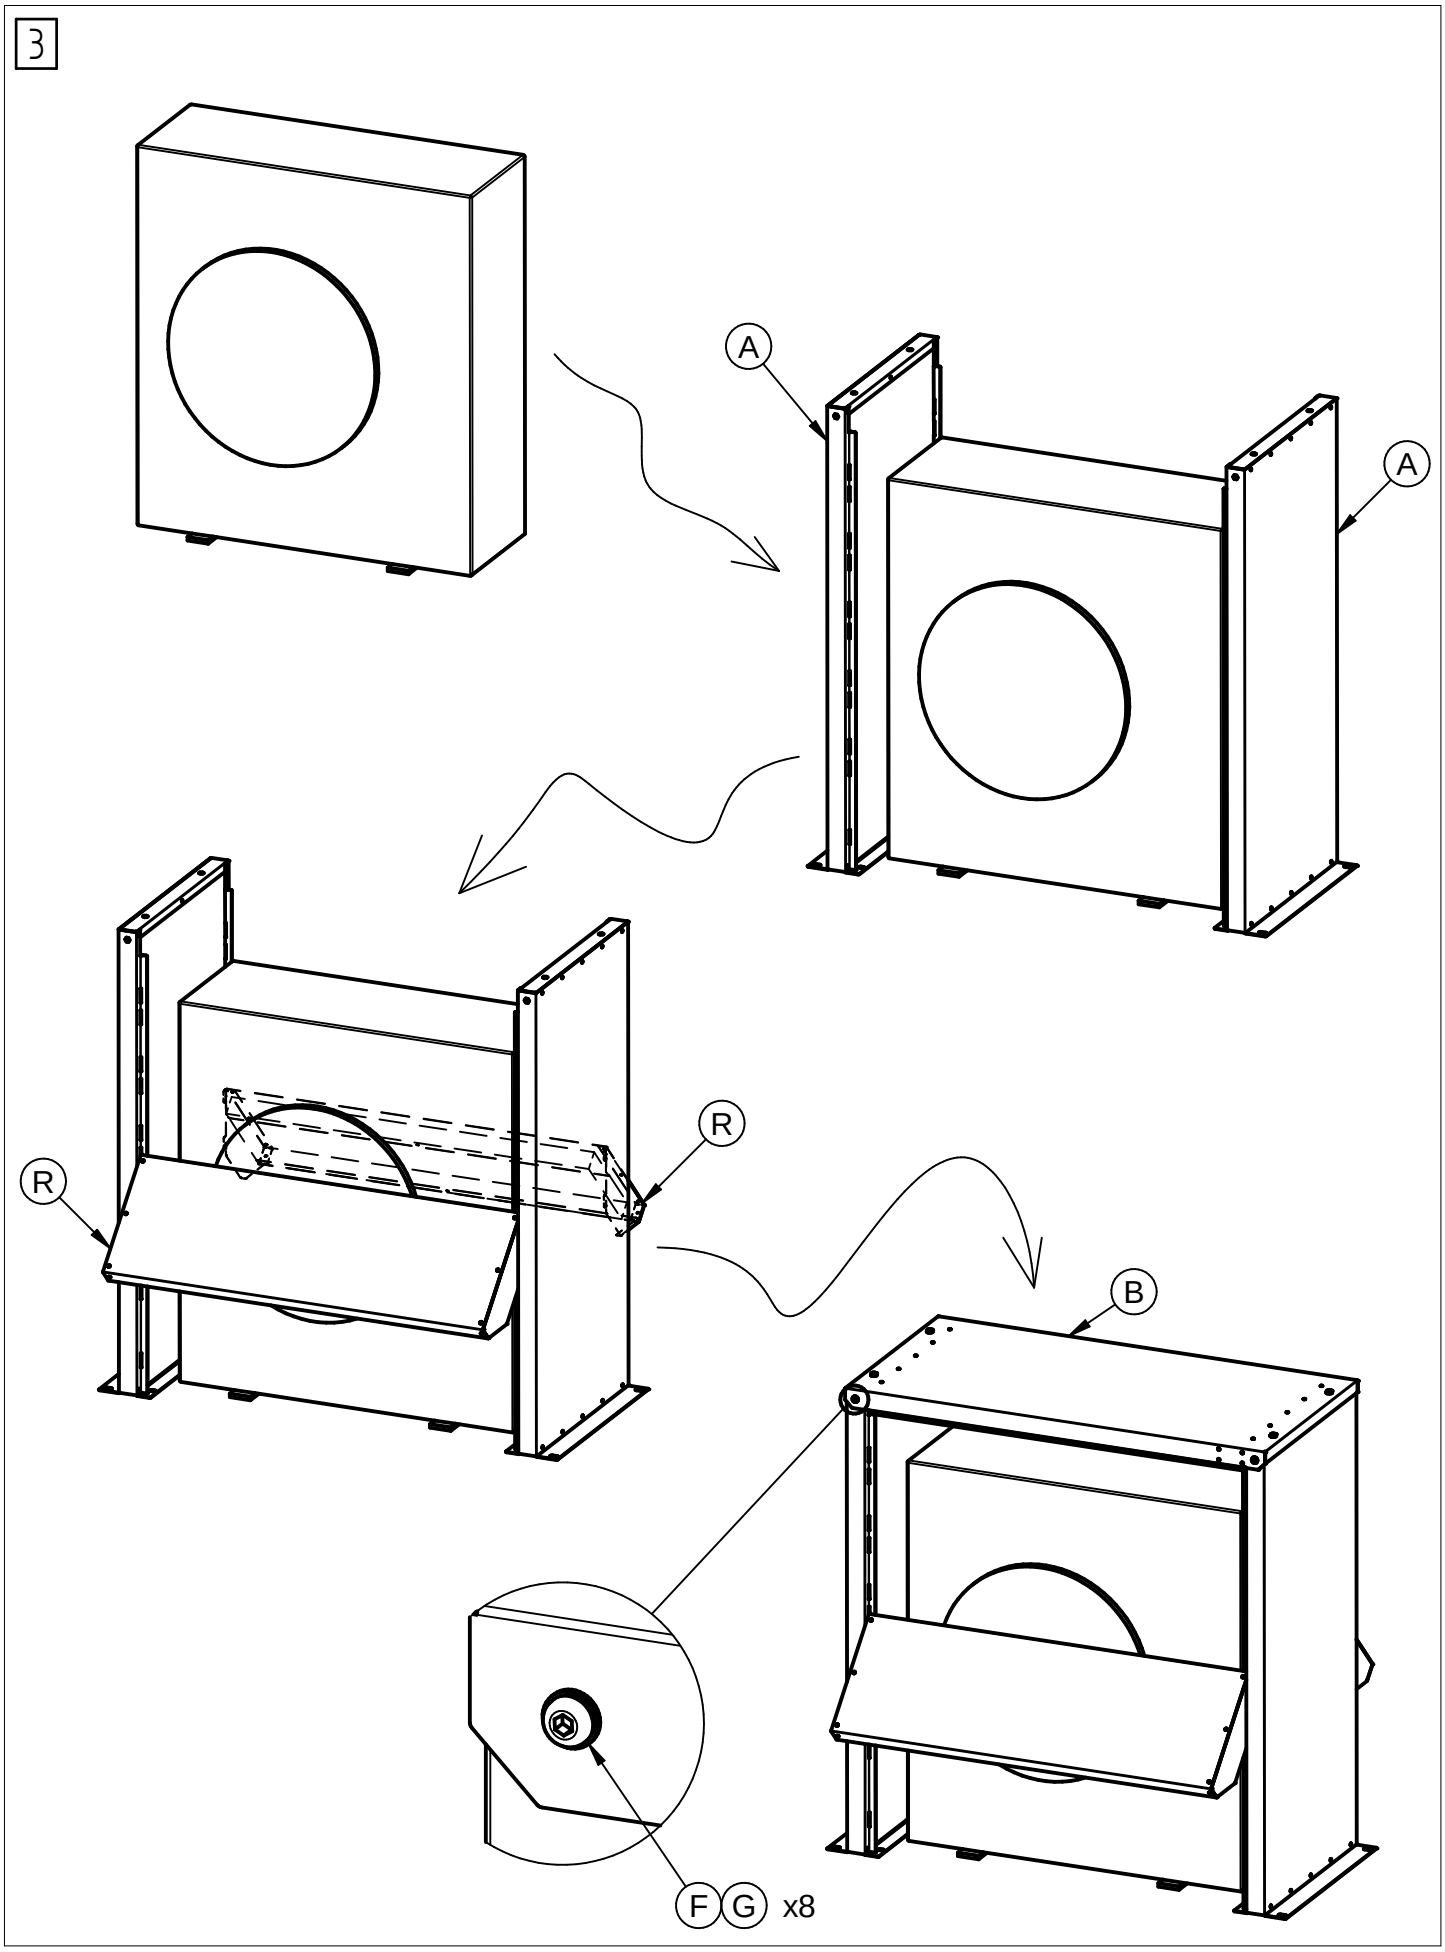
3
A
A
R
R
B
F
G
x8


4

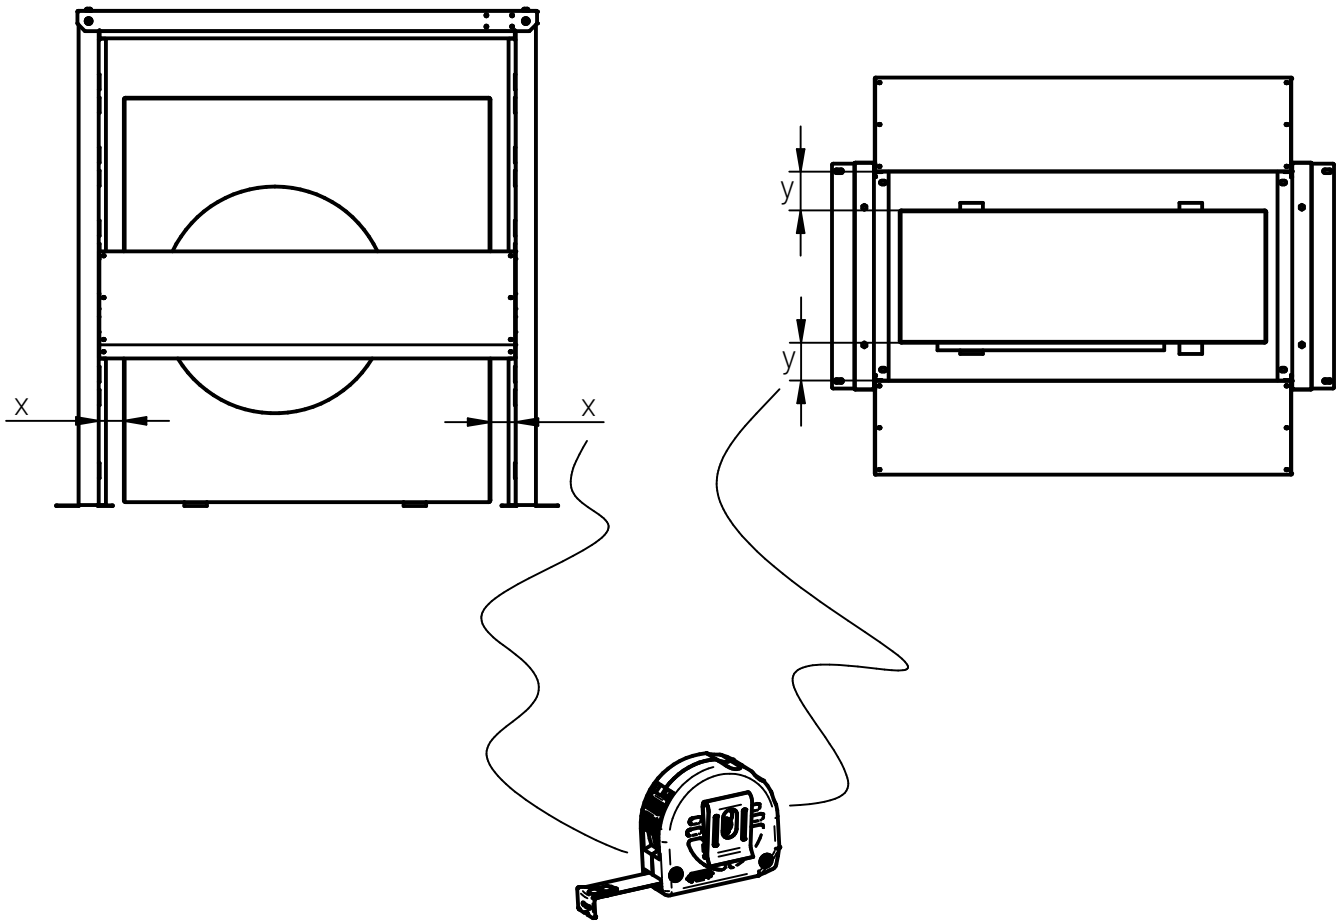


5

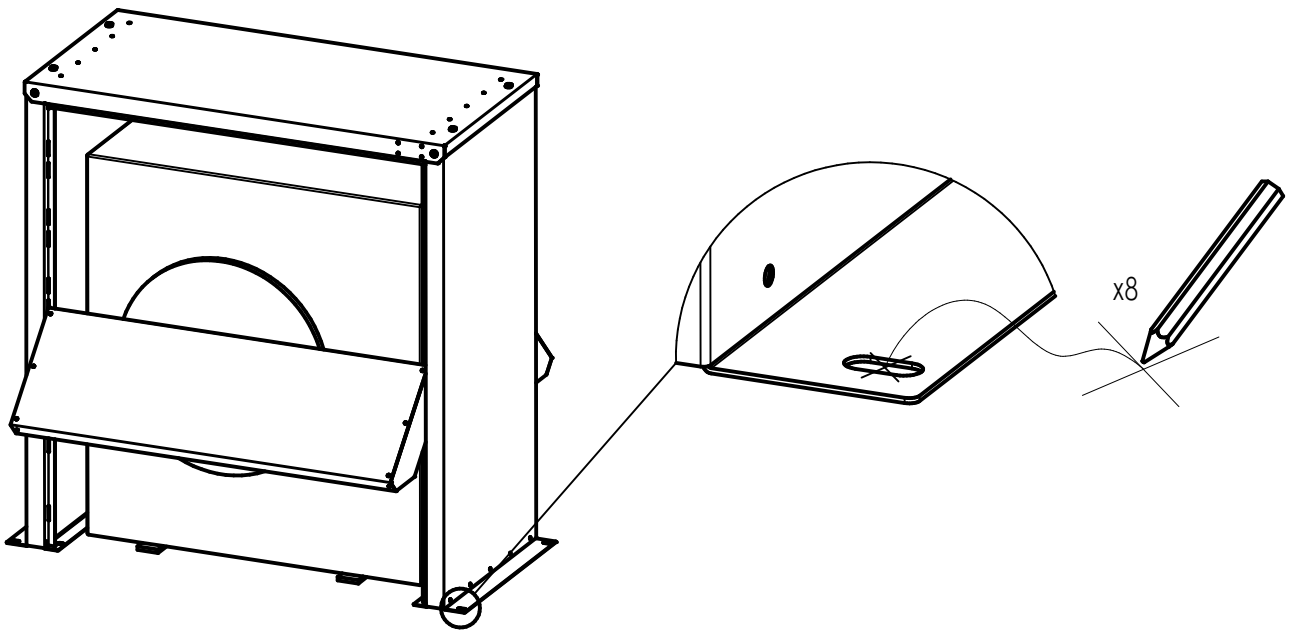


6

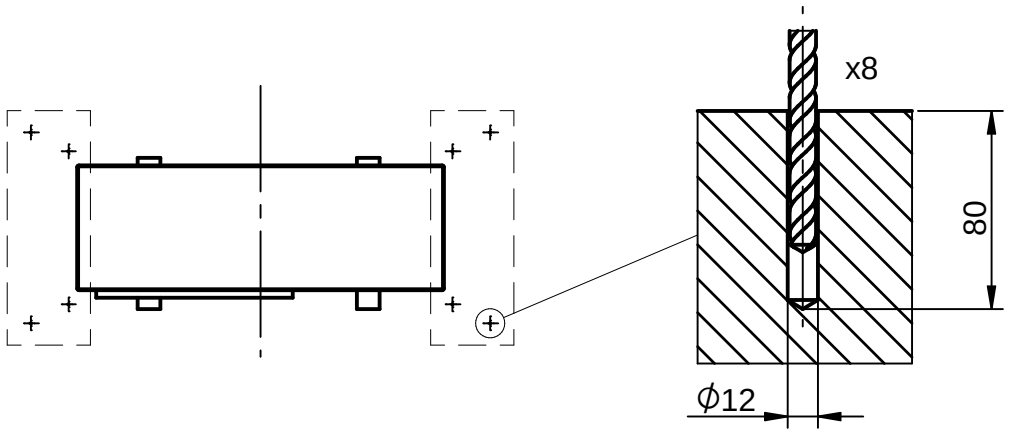


7

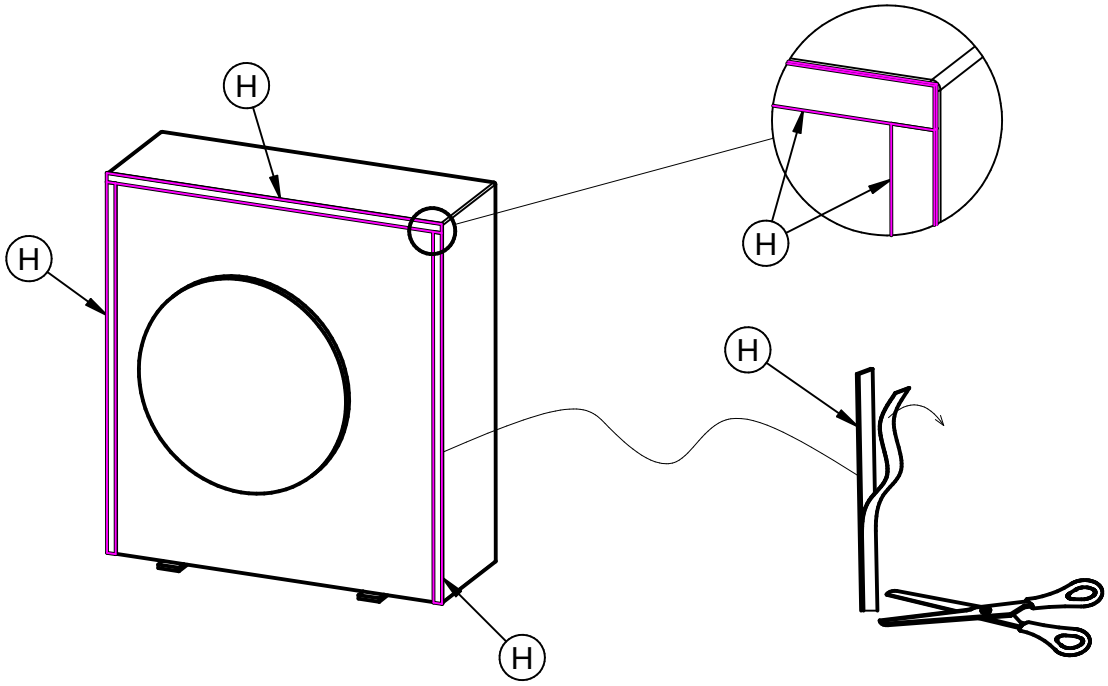

8

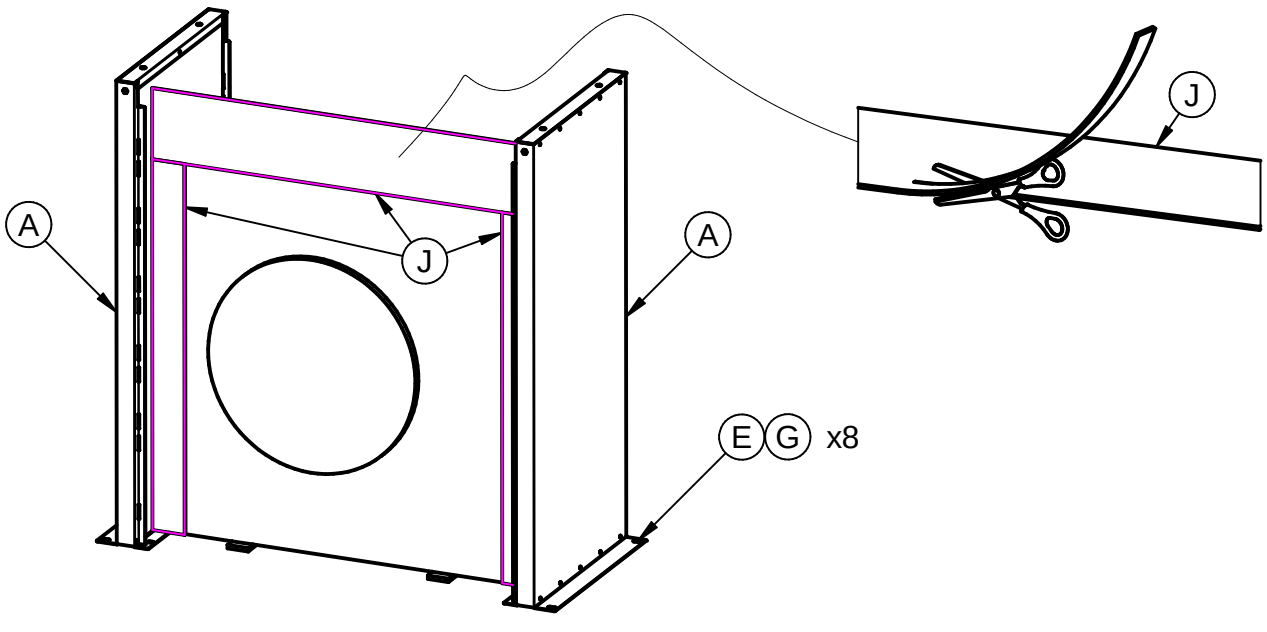

9

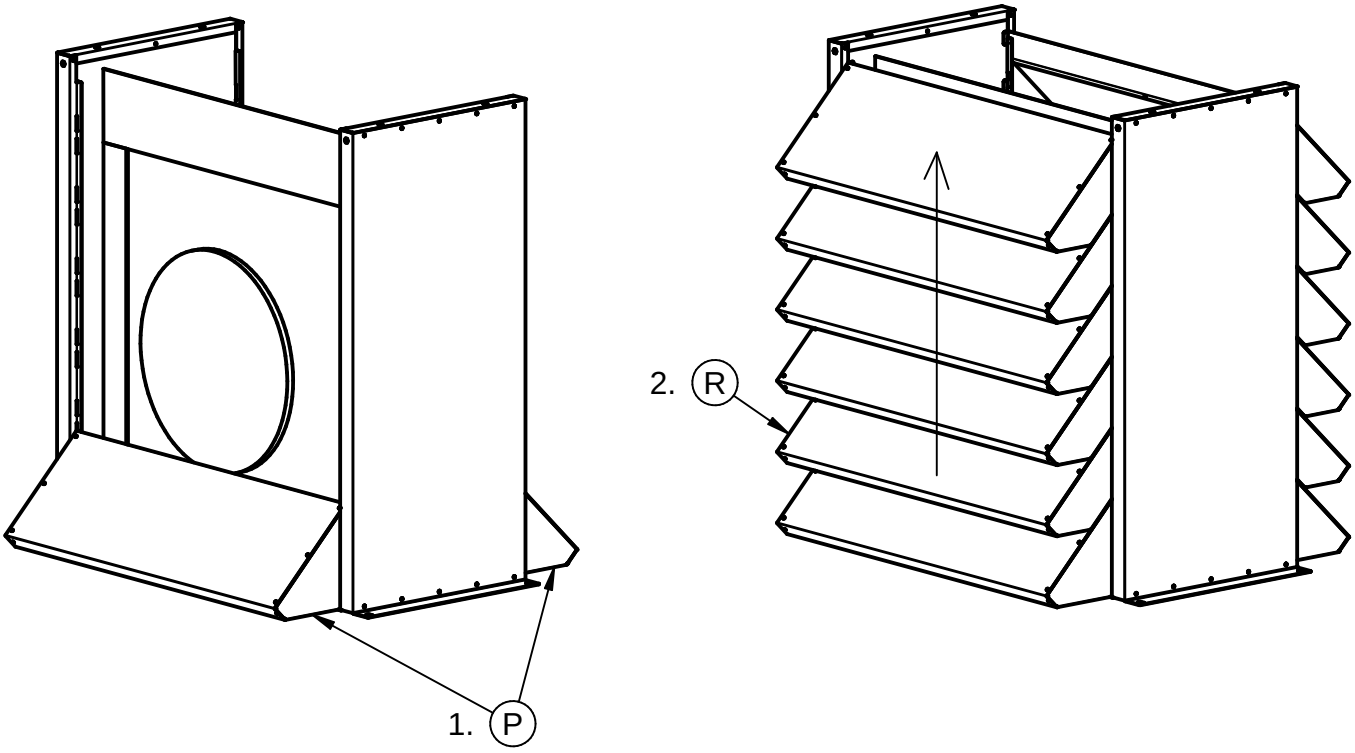

10

